

# MapEV Skoda Enyaq Installation Guide

1. Open the passenger side door, lock the car using the keyfob and take the keyfob out of range – at least 5 meters away from the car.



2. Unscrew the screws at the bottom of the glove box and remove cover.





3. The control unit is located at the bottom of the passenger side A pillar:



4. The module is held in by a plastic clip.

Wedge a plastic removal tool or flathead screwdriver under the control unit while at the same time releasing the clip and remove the controller.

Remove the large connectors by gently lifting the orange tabs upwards using a small flathead screwdriver.

Remove the small plug by pushing on the retaining tab on top of the connector.

5. Exchange the control unit. Follow the instructions in reverse order to reassemble.

